

SAFETY INFORMATION

2/18

Sky Wide Systems (SWS) Fire RSLs

On the Sky Wide Systems (SWS) Fire containers the reserve cable housing is attached under the reserve flap by a metal clamp known as the *'ear'*. According to the manufacturer's instructions, the *'ear'* should be facing to the right (see figure 1).

On a couple of occasions, the *'ear'* on the anaconda housing has been found facing to the left (see figure 2).

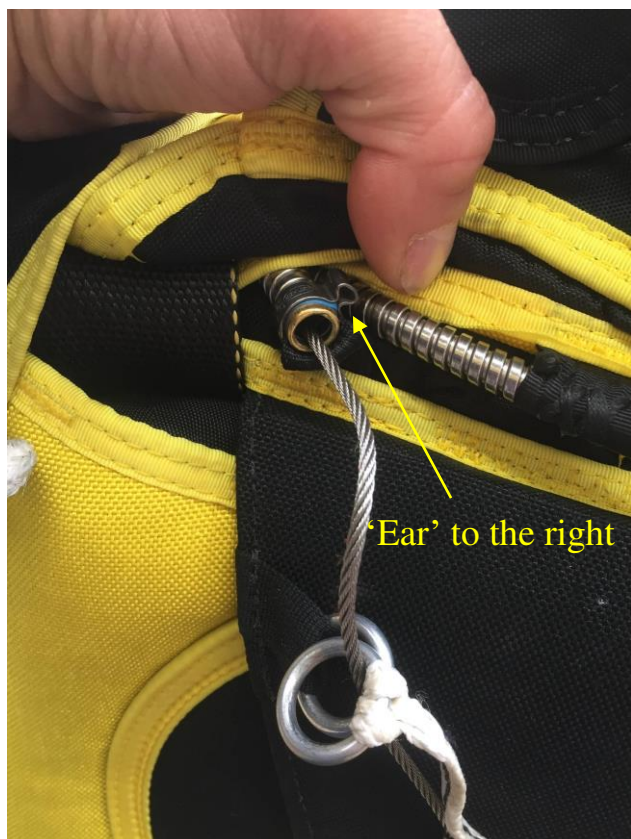


Figure 1



Figure 2

If the ear is on the left, and close to the opening, it is possible for the ring on the RSL to snag on the *'ear'* as shown in figure 2.

To prevent this from happening, the manufacturers recommend using seal thread to tie the ring on the RSL to the guide ring on the reserve flap as shown in figure 3.

Only use a single wrap of seal thread to do this.



Figure 3

26 September 2018

Distribution

CIs
Council
Riggers
STC Mailing
Skydive – The Mag
File

Wharf Way, Glen Parva, Leicester, LE2 9TF
Telephone: 0116 278 5271, Facsimile: 0116 247 7662, e-mail: skydive@bpa.org.uk